



HPK 包縫車用拖輪安裝手冊


THE INSTRUCTION GUIDE BOOK FOR HPK




安裝前,請詳細閱讀安裝說明書

PLEASE READ INSTRUCTIONS & ASSOCIATED DRAWINGS BEFORE INSTALLATION


- ① 將拖輪底座固定於車板上
Fixing the base on the plank.

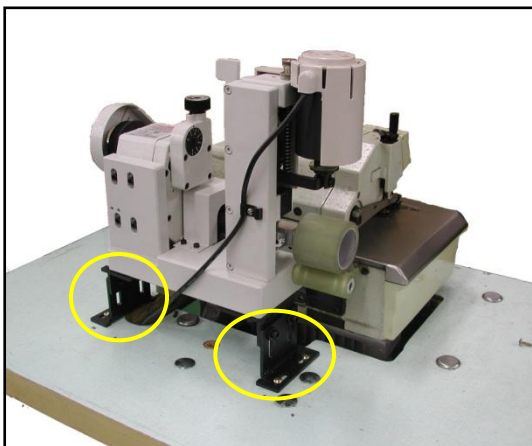


- ② 拖輪與針車呈平行
Puller is parallel with needle

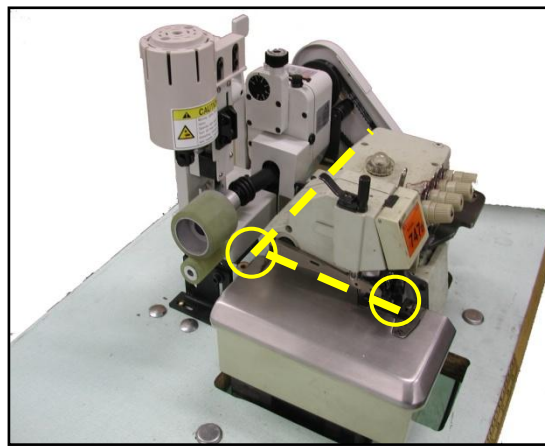


- ③ 利用底座滑槽可上下左右調整拖輪位置
To adjust puller position by slide

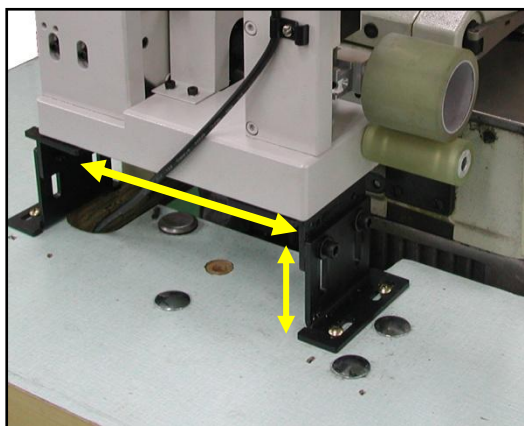


- ④-1 安裝皮帶輪
Installing the pulleys

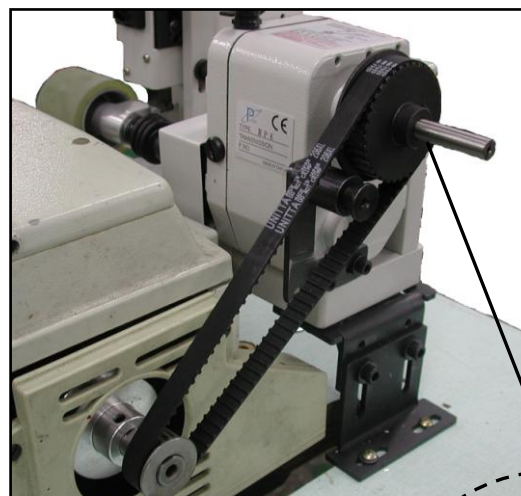

- ④-2 固定皮帶蓋
Installing the belt covering

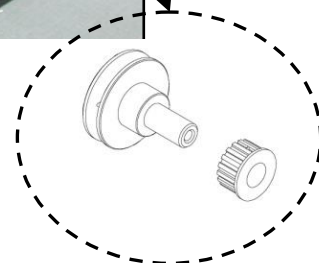


時規皮帶鬆緊固定螺絲，可依所需調整皮帶鬆緊
Timing belt tightening screw.

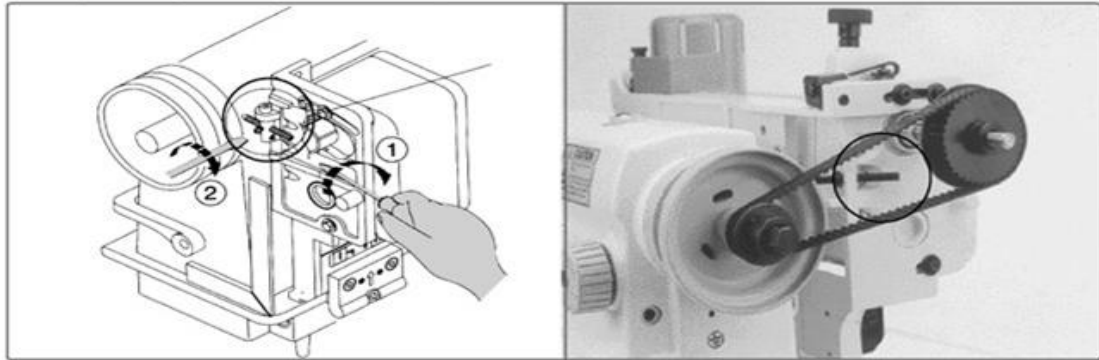


入力軸定位 Adjust input shaft position


一般針車定位時，
針車提升至最高點
General type, needle
to the toppest position

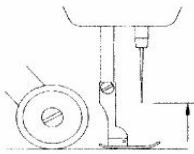


針送針車定位時，
針車下降至最低點
Needle feed type,
needle to the lowest position

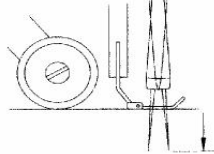


變速機的紅線對齊入力軸紅線後，上緊時規齒輪螺絲
Meet the both red line on transmission input shaft,
tighten the timing gear screw

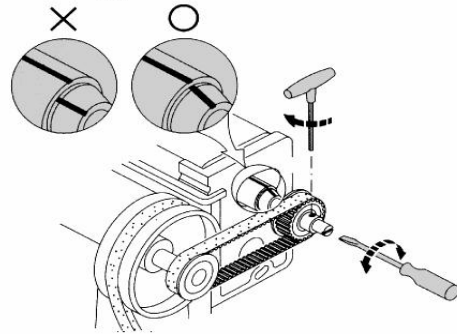



皮帶蓋安裝固定螺絲 Safety belt cover adjustment screws

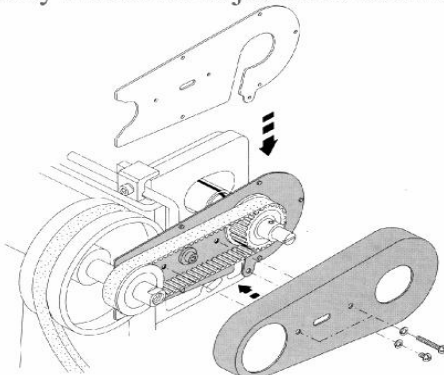

安全扣 Machine rest latch for maintenance

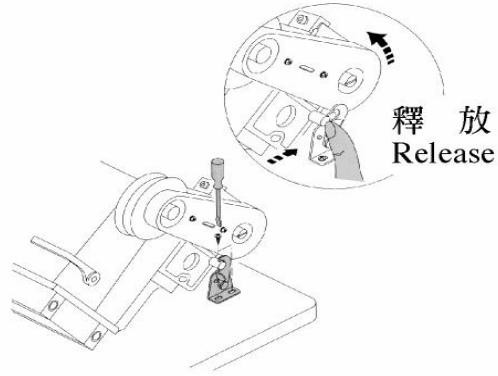

配合針車送料調整 Feeding adjustment

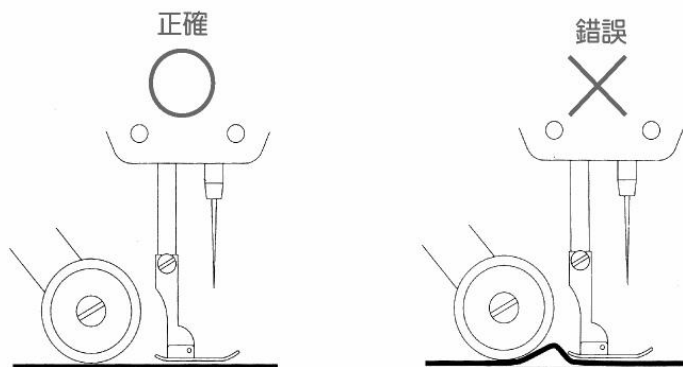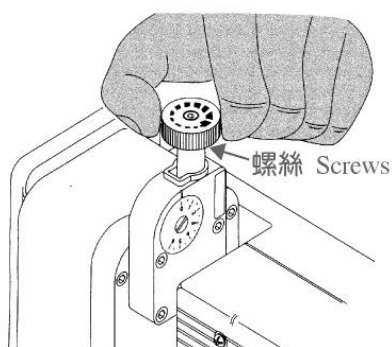

HPK

