




HST-L 自動收衫機安裝手冊

THE INSTRUCTION GUIDE BOOK FOR AUTOMATIC MATERIAL RECEIVING MACHINE

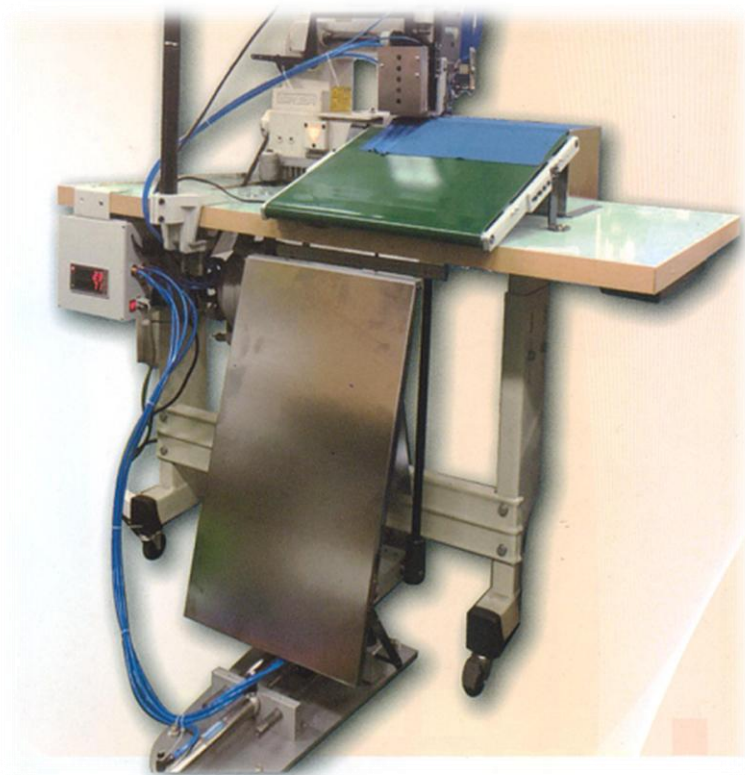


安裝前,請詳細閱讀安裝說明書

PLEASE READ INSTRUCTIONS & ASSOCIATED DRAWINGS BEFORE INSTALLATION

HST-L

自動收衫機安裝說明

Automatic Stacker Machine installation

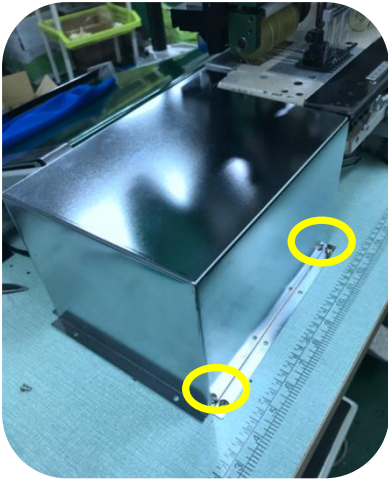


1. 安裝鐵台

To install the iron platform




2. 安裝輸送帶

To install the conveyor belts

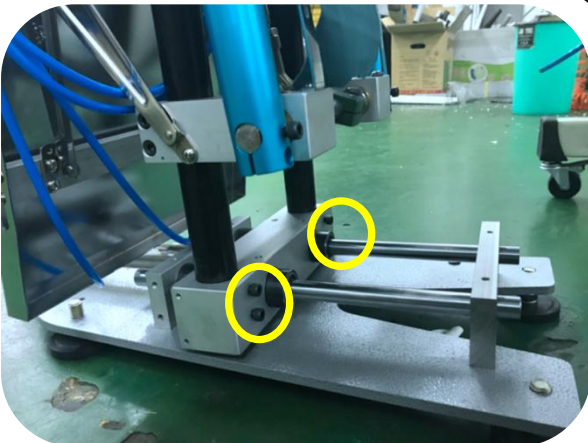

3. 鎖上送料架

To lock the feeding frame

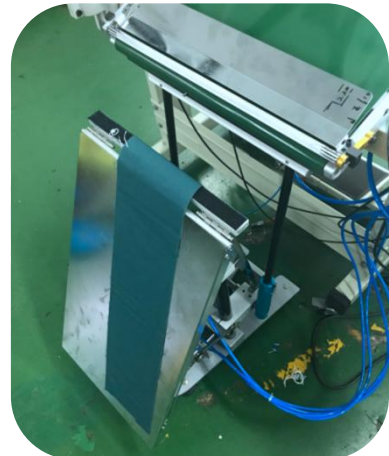


4. 送料架放置適當位置

Feeding frame is placed in the proper position



7. 固定控制箱


To fixing the control box

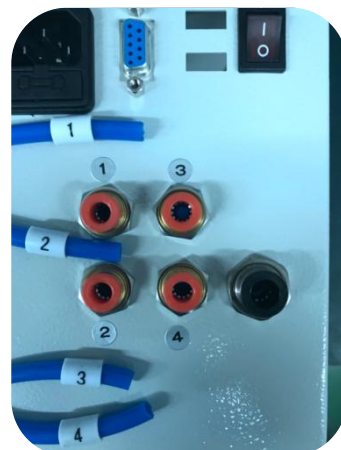

8. 依照數字接上風管

Connect the air duct according to the number

軟體設定說明 Software setting description

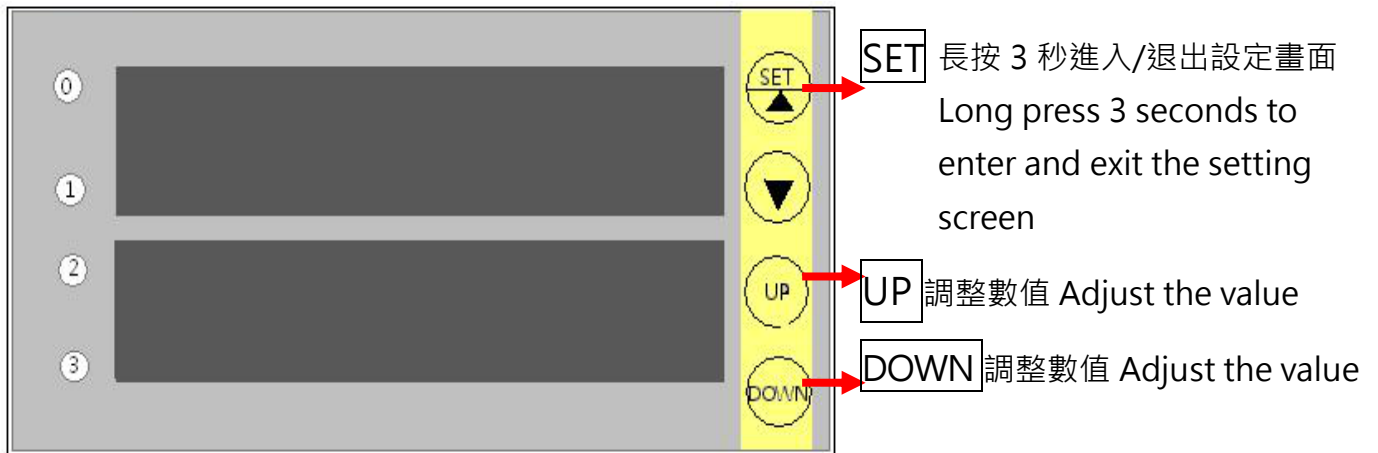

D200	布料下降的長度,數值 1 大約為 3.35mm The length of the fabric falling, the value 1 is about 3.35mm
D201	夾布後到移動的等待時間 The time waiting after gripping to move
D203	無布料後到移動的等待時間 Waiting time after no cloth to move