




# **HTA-F 埋夾/曲手車用裝置安裝手冊** **THE INSTRUCTION GUIDE BOOK** **FOR MULTI-NEEDLE CUTTER**

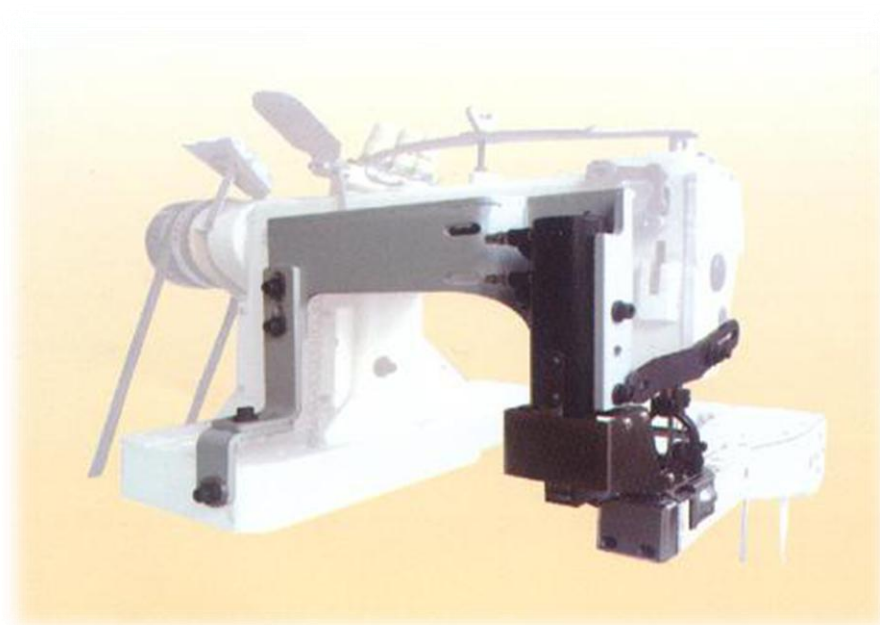


安裝前,請詳細閱讀安裝說明書


PLEASE READ INSTRUCTIONS & ASSOCIATED DRAWINGS BEFORE INSTALLATION

# HTA-F 埋夾/曲手車用閘刀裝置安裝說明


Installation instructions for feed-off-the-arm cutter device

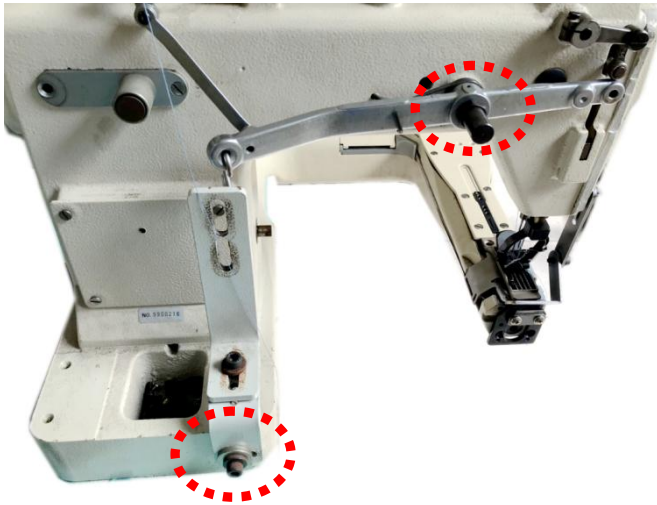


1. 鎖上支撐架螺絲 To lock the bracket screws

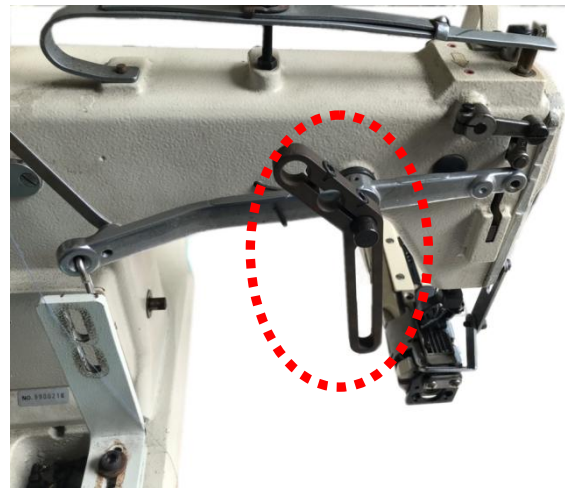


2. 鎖上固定支器 To lock the bracket

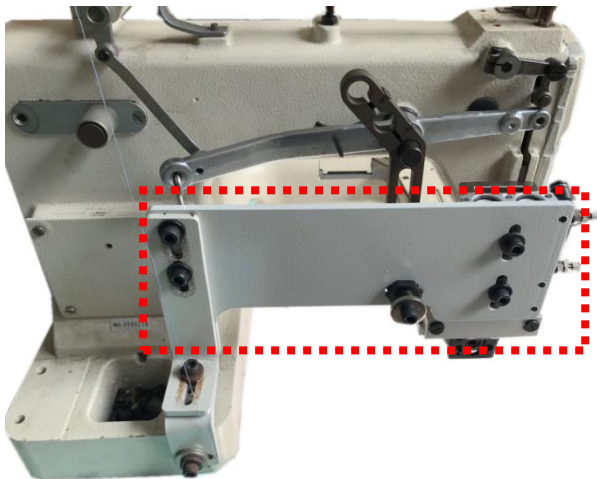


3. 鎖上本體安裝架  
To lock the mounting bracket

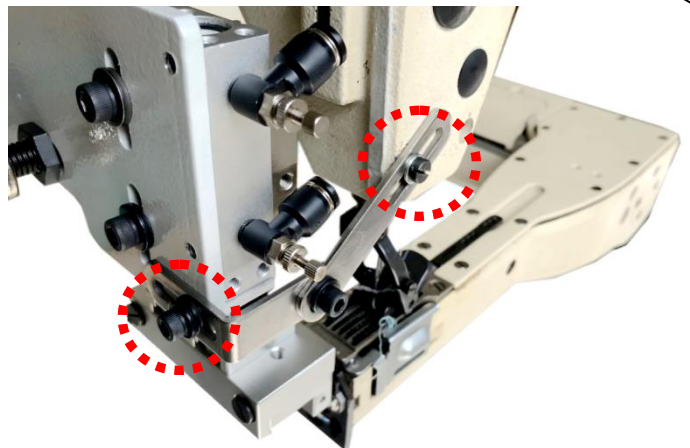

4. 鎖上側邊支架  
To lock the side bracket


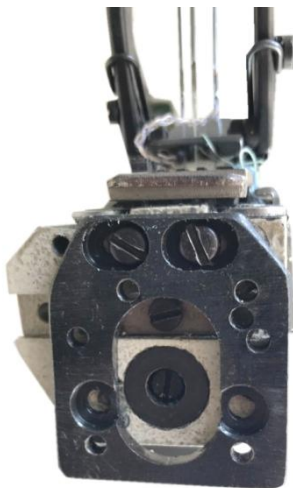


5. 鎖上下切刀座與刀片 To lock the upper and lower cutter base and blade

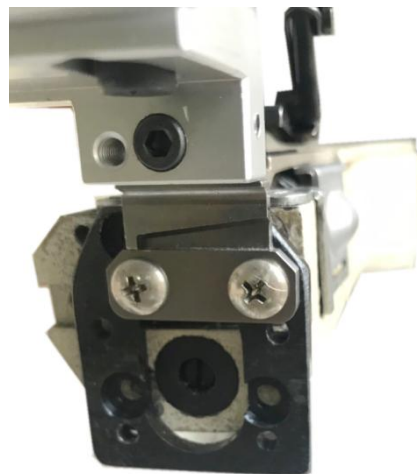


# HTA-F 埋夾/曲手車用閘刀裝置安裝說明


Installation instructions for feed-off-the-arm cutter device

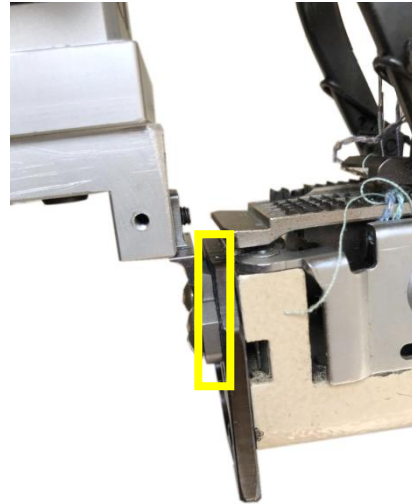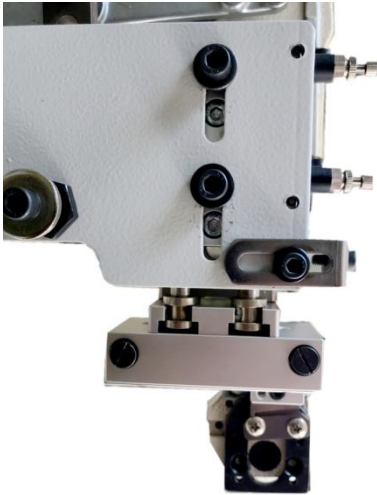

6.調整鐵架使其刀片閉合 To adjust the iron frame to close the blade

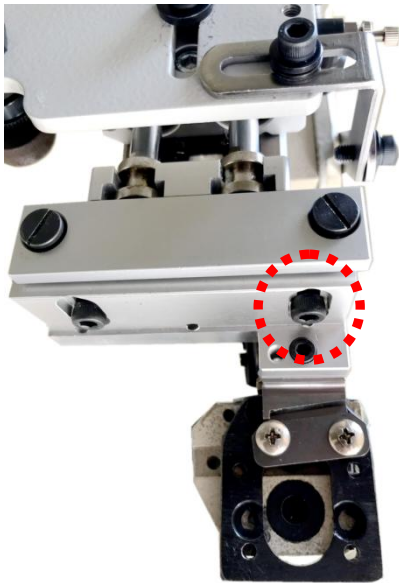

7.放鬆右邊螺絲  
To relax the right screw

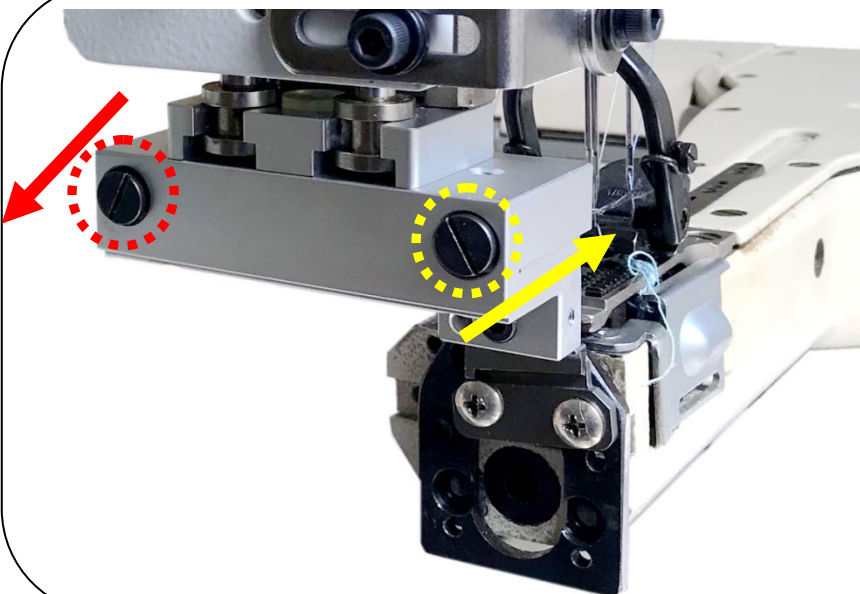

8.調整上刀片,使其與下刀片型成  
斜面才可裁剪  
To adjust the upper cutting  
blade so that it can be cut with  
the lower cutting blade to cut





# HTA-F 埋夾/曲手車用閘刀裝置安裝說明


Installation instructions for feed-off-the-arm cutter device



9.鎖上控制箱及過濾器 To install the control box and filter regulator lubricator

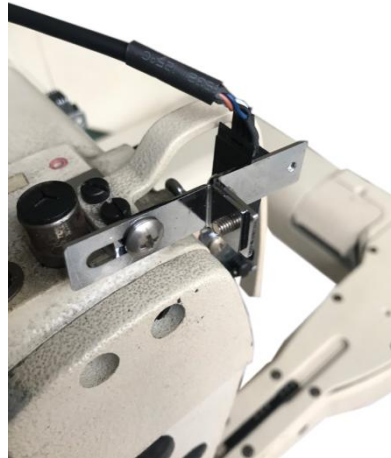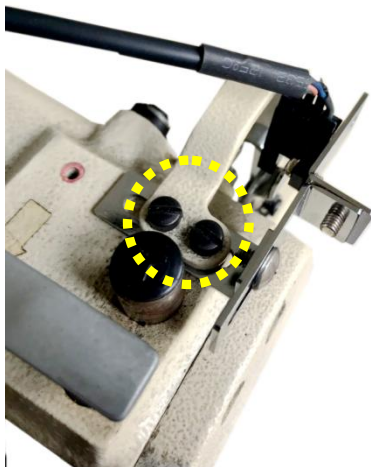


10.鎖上光素子 To lock the optical

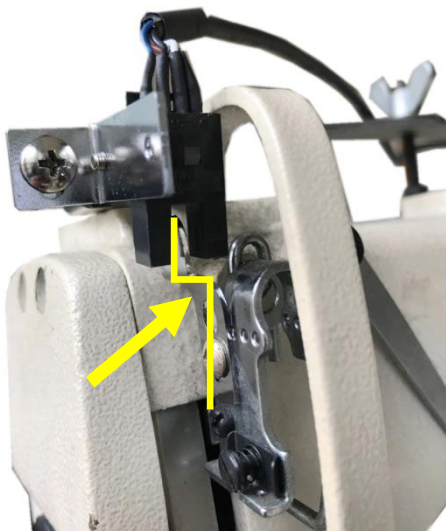

11.鎖上光素子鐵片,需介於光素子之間  
間

To lock the iron sheet, must be  
between in optical

# 控制器操作說明 Controller Operating Instructions

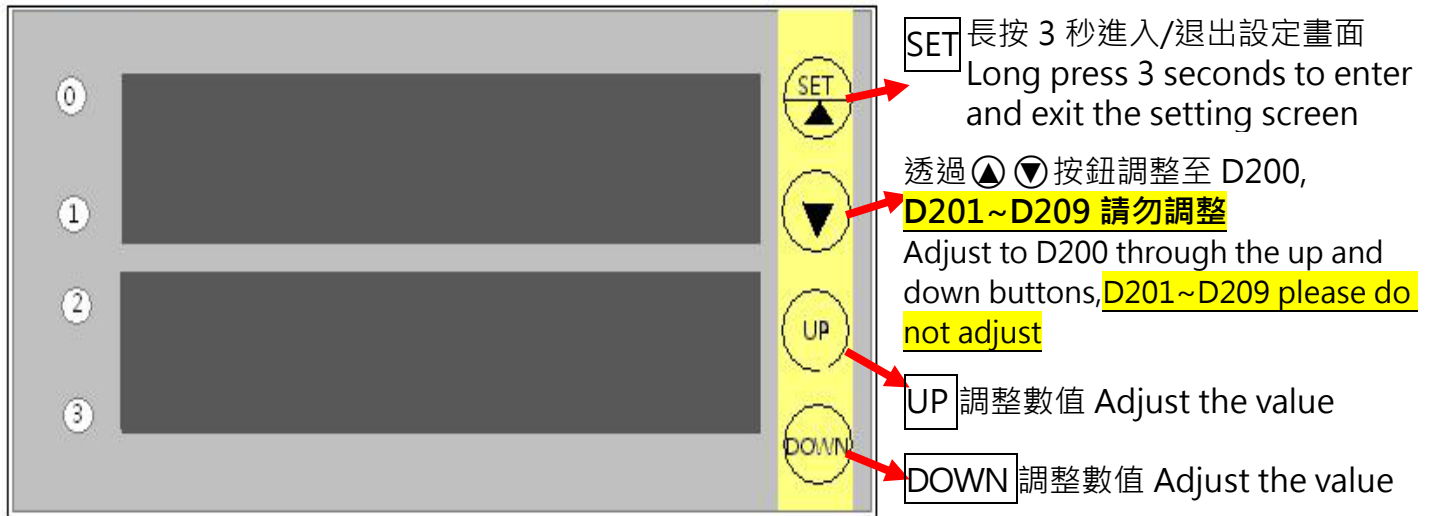

※初始需要: Initial needs: ①手動定位 Manual positioning ②歸零 Zeroing

顯示畫面 Display screen ↔ 設定畫面 Setting screen	
(長按 3 秒進入/退出設定畫面) (Long press 3 seconds to enter and exit the setting)	
顯示針數 Stitch number display	d 200:設定針數 d 200: Set the number of stitches
顯示件數 Amount display	設定針數數值 Set the number of stitches